
How do I use the 2-digit speed call feature on my 7500 series telephone set?

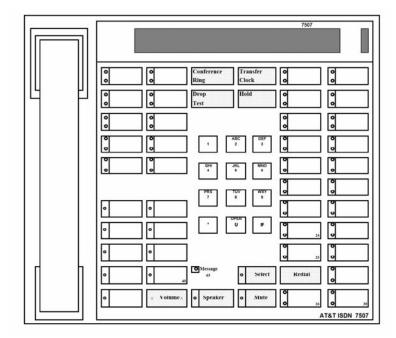

2-digit speed calling allows you to program up to 30 individual numbers on your telephone.

Once programmed, you can easily access the numbers by using your telephone key pad and a 2-digit code followed by the # key.

Your 7500 series ISDN telephone set has been installed with the feature that also allows you to program individual telephone numbers for speed dialing by simply pressing one (1) button. Speed call buttons are labeled on the set. The quantity of speed call buttons and their location on your telephone set may vary.

To program (store) a desired telephone number:

Press the SPEAKER button or lift the HANDSET

- Listen for a dial tone
- Dial code * 75 ... Listen for second dial tone
- Dial the speed code 20-49
- Dial the telephone number (to be stored) in the usual manner, followed immediately by the # key
- Listen for confirmation tone ... hang up

To dial a (stored) telephone number using a SPEED CALL BUTTON:

- Press the SPEED CALL button associated with the desired telephone number; the SPEAKER will automatically activate or you may lift the HANDSET while the telephone number is being dialed

To dial a (stored) telephone number WITHOUT using a SPEED CALL button:

- Press SPEAKER button or lift the HANDSET
- Listen for a dial tone
- Dial the 2-digit speed dial code (20-49) followed immediately by the # key
- The telephone number will ring